

Table of Contents

Transferring Data to PatternFinder from SeaStar, Mercury and FoodStar	2
Transfer to SFP.....	2
Transfer to MFP	3

Transferring Data to PatternFinder from SeaStar, Mercury and FoodStar

Transfer to SFP

To transfer data from your Star-Oddi supporting software to SFP do the following:

1. Enter the Star-Oddi application software (SeaStar, Mercury or FoodStar)
2. Select a recorder and a DAT file or import a DAT file for viewing
3. When the DAT chart is active, click the **PF** button on the chart bar



When you click the **PF** button, **PF** will be activated. **PF** will be launched if it is not already running.

The SFP window appears:

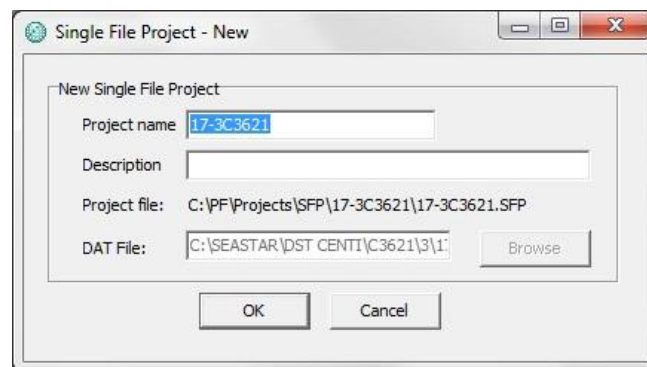


Figure 1 New SFP

The default Project name is the name of the recorder you transferred. You can change the name and enter a short description of the project.

Click **OK** and the DAT file will be transferred and a SFP created which will appear in the Overview Pane.

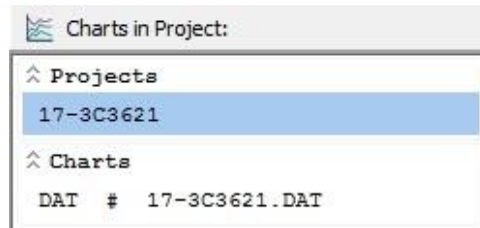


Figure 2 Overview Pane

Transfer to MFP

To transfer data to MFP, do the following:

1. Activate PF
2. Open an already created MFP or create a new one.
3. Enter the Star-Oddi application software (SeaStar, Mercury or FoodStar)
4. Select a recorder and a DAT file or import a DAT file for viewing
5. When the DAT chart is active, click the PF button on the chart bar



PF will automatically open on the screen and the SFP window appears:

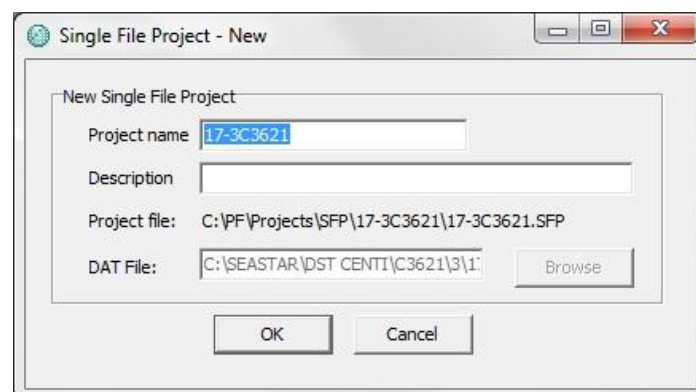


Figure 3 New SFP

The default Project name is the name of the recorder you transferred. You can change the name and enter a short description of the project.

Click OK and the following window appears:

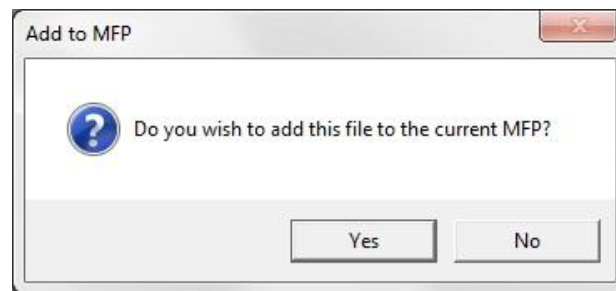


Figure 4 Add to MFP

Click **Yes** if you wish to add the file to the MFP. If you click **No** the file will become a regular SFP.

The project will appear on the Overview Pane along with the other projects.

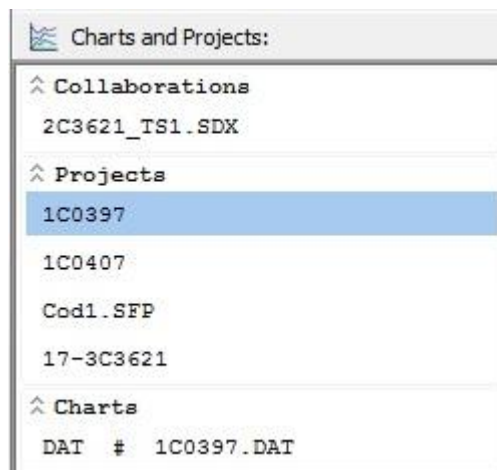


Figure 5 Overview Pane